


INSTALLATION GUIDE


Polarity Change – Uniboot Patchcord GB

1

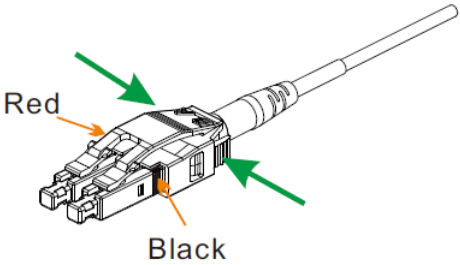

Press both sides to unlock the transparent clip


2

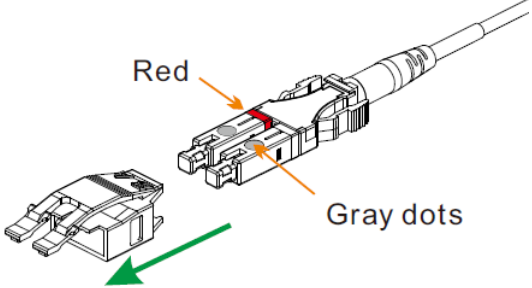

Pull the clip towards connectors end face and remove it completely
Attention: do not remove the dust cap unintended


ONLY FOR APC CONNECTORS

2.1

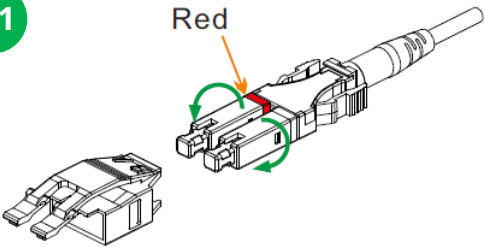

Rotate each ferrule 180 degrees so that the grey dots face to the bottom


2.2

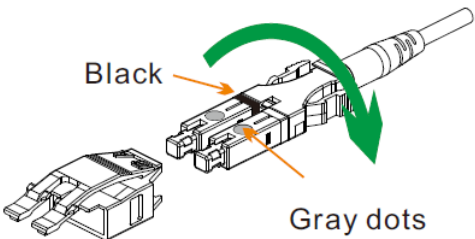

Turn around the complete connector, the red / black indicators are now at the other side (switched)
Note: the grey dots are now facing to the top (APC)
→ continue directly with step 4


ONLY FOR APC CONNECTORS

3

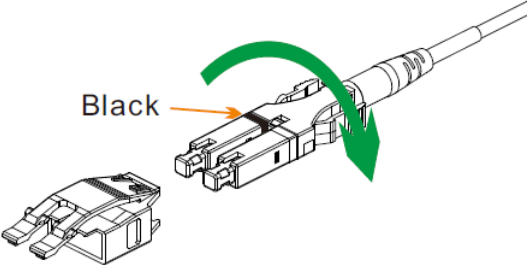

Turn around the complete connector
The red/black indicators are now at the other side (switched)
Note: the grey dots are now facing to the bottom (PC)

4

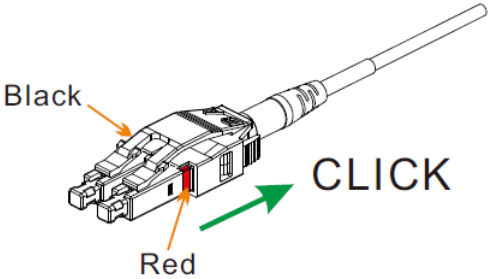

Push the clip onto the connector the same way and orientation it was removed
Note: to check finally the polarity change red/black indicators have now been changed corresponding to A/B